

快速指南

nLink+ MR IP & EC Transmitter



English

English page 2:

Thank you for buying the nlink+ MR transmitter.

You obtained a reliable transmitter for your nSens probes providing an RS485 interface.

As the transmitters have passed quality assurance testing you can use them out of the box.

中文

中文 page 3:


感謝您選擇nlink+ MR發射器。您現在擁有一款高度可靠的發射器，專為nSens探針設計，支援RS485接口。這些發射器已經經過嚴格的品質保證測試，保證您可以立即開始使用，無需顧慮。

Read the instruction manual (available on the website) for detailed instructions and safe handling

Quick Guide:

nLink+ MR EC: Connect the 3-wire nSens cable to the corresponding terminal (nBus-P) according to the colour coding.

nLink+ MR IP: The nSens can be connected directly to the transmitter or use an extension cable for flexible installation.

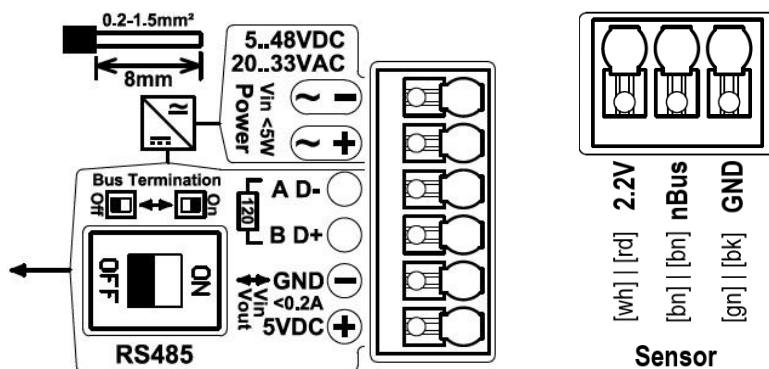

Configuration:

Use nlink-USB cable (Art-No 2601818) and configuration software nSoft-ACT-T to change these settings anytime.


Technical information and other information subject to change without notice

詳細的使用指南和安全操作說明請參閱使用手冊（可在網站上找到）。

快速入門指南：

nLink+ MR EC: 根據顏色編碼，將3線nSens電纜連接到相應端子（nBus-P）。

nLink+ MR IP: 您可以將nSens直接連接到發射機，或使用延長電纜進行靈活安裝。

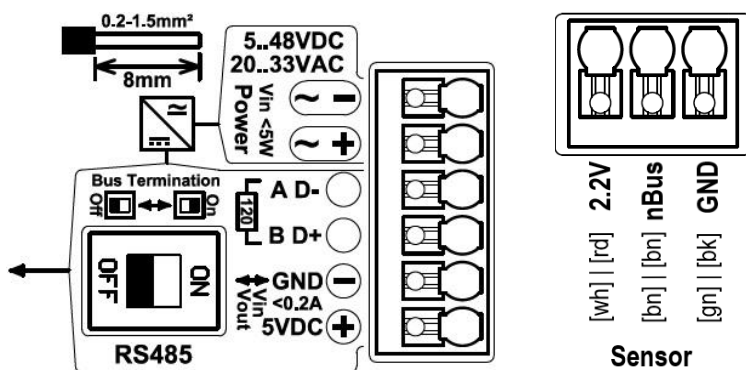

配置：

使用 nlink-USB 電纜（貨號 2601818）和設定軟體 nSoft-ACT-T 隨時變更這些設定。

技術資訊和其他資訊如有更改，恕不另行通知

For further information, please get in touch with your sales representative.

Check our website www.novasina.ch for the instruction manual, software download and distributor contact information.

如需進一步信息，請聯繫您的銷售代表。

請在我們的網站 www.novasina.ch 上查閱使用手冊、軟件下載和經銷商聯繫信息，具體位置可參見相關頁面。